


PE9000S Series H₂ Purifiers



Easy Start-Up Instructions

1. Verify that electrical and gas connections are made to specification.
2. Turn the main disconnect switch to the "ON" position and press the "START/RESET" button within 10 seconds.
3. Wait approximately 20 seconds for the controller to initialize. Once ready, the controller will display the MAIN screen. The system will initialize in "SHUTDOWN" mode.
4. Press the "OPERATE" button on the touch screen. The system will begin heating the purifier cell and will automatically switch to operate mode when ready. From a cold start, it takes approximately 45 minutes for ultra-pure hydrogen to start flowing.
5. Use the Rotameter flow chart to set the rotameter bleed gas flow to approximately 2% of the UPH flow.
6. To stop H₂ flow and shut down, press the "SHUTDOWN" button.

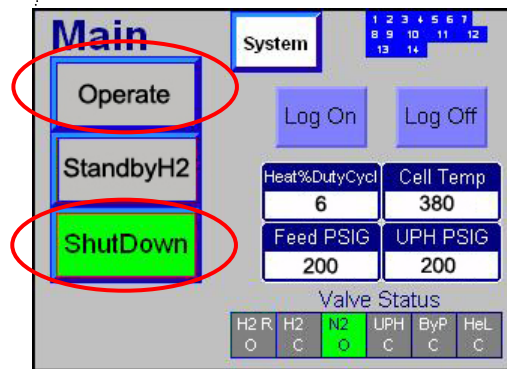

Refer to the User's Manual for additional operating instructions and for installation information.

PE9000S Series H₂ Purifiers

